



# PVC Material


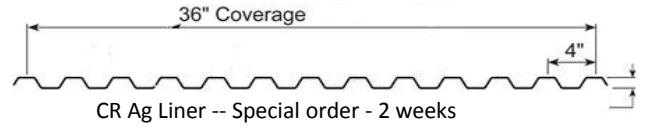


**ALL MATERIAL ON THIS PAGE (Requires 1 Step Screws or pre-drilled 1/4" holes)  
Warranty will be void if this direction is not followed**


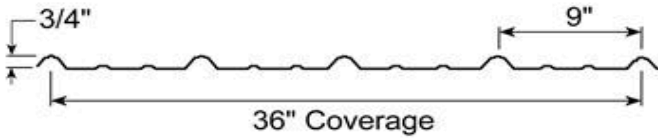


## PVC Ag White Liner (36" Coverage)

	EA	SR			CR
PVCSRLP20 - 20' 4" Panel (special order for custom lengths)		*			*
J7812V - 12' Vinyl J Trim		*			*
J7810PVC - 10' PVC J-Trim		*			*
125OSW - 1-1/4" One-Stepper White Painted Screw (500/Bag)		*			*
125OSZ - 1-1/4" One-Stepper Zinc Screw (500/Bag)		*			*
2OSZ - 2" One-Stepper Zinc Screw (500/Bag)		*			*

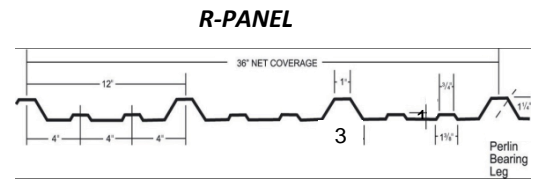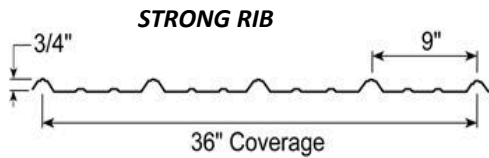


(Clear and White only --- White is special order)

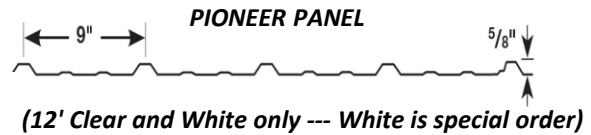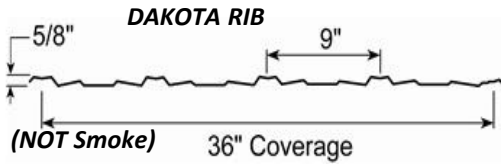

## Polycarbonate Skylight Panels (Clear-90% ~ Smoke-80% ~ White-70%)

	SR	PR	DR	RP	
SK - 8' Sheets	*		*	*	
SK - 10' Sheets	*		*	*	
SK - 12' Sheets	*	*	*	*	



## Polycarbonate Ridgelite (Clear-90% ~ Smoke-80% ~ White-70%)

	SR	PR	DR	RP	CR
RL - 10' 6" x 24" Ridgelite Ridge Cap	*	*	*	*	*

RLB - 1" Ridgelite Support Bracket